


3-1/2" Casing (Color Match)

Trim Installation Instructions (pg 1/4)

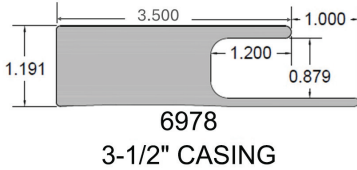

GENERAL INFORMATION

- Check local building codes before installation.
- Before proceeding, read all instructions for both Everlast siding and appropriate pocketed trim products.
- All pocketed trim used with Everlast siding must have a minimum pocket width of 3/4" (projection from the wall) and a minimum pocket depth of 5/8" for course runs less than 24'. Over 24', plan a pocket depth of 3/4" or greater. The trim must be installed prior to installing Everlast siding.
- Do NOT install Everlast siding or Everlast trim in temperatures below 0° F.
- Inspect siding and trim for any breakage, foreign objects, surface defects, color consistency and correctness. Do NOT install questionable product.
- Use a fine tooth or vinyl saw blade to cut all material.
- Fasten material using an exterior grade nail or screw. (Recommended: galvanized/stainless/non-corrosive roofing nail or screw).
- Fasten trim through every other or every third nail hole, making sure the trim aesthetically looks good on the wall. Do not over drive the fastener--fastening too tight may cause distortion in the trim.
- To keep miter and butt joint ends tight, it is recommended to use a PVC glue or plastic weld to bond together.
- Use a glue accelerator to speed up the cure time.

JOB SITE STORAGE

- Do NOT stack siding or trim more than 3 skids high.
- Do NOT store bundles in a vertical position.

BEST PRACTICE

- Siding or trim should be stored inside when possible.
- Always avoid storing in direct sunlight, product should be covered and protected prior to installation using a tarp and/ or supplied shroud. Keep siding away from heat sources.
- When product is stored outside use wood (or equivalent) supports to avoid direct contact with the ground in conjunction with covering.
- Everlast is a premium product. Handle as you would with fine grade lumber.
- Everlast recommends lifting from the middle of the product (length).
- Never slide or drag objects across the reveal surface.
- Take caution when opening bundle packaging with a knife or sharp object not to scratch the reveal surface.

PREPARING WALLS

- Everlast siding and trim must be installed over flat and level exterior walls with either 16" or 24" on-center framing.
- Everlast siding serves as a rain screen, not a weather-resistant barrier. Therefore, it must be installed over a weather-resistant barrier.
- Properly flash around all windows, doors, rake boards, chimneys, and areas of transition between dissimilar materials.
- If installing over concrete block, poured concrete, or brick, siding must be installed over 1" x 3" furring strips.

BEST PRACTICE

If exterior walls are not flat or level, a quality underlayment should be installed first to create a flat and level surface.

COMMON APPLICATIONS

- Casing trim is typically used for Window/Door Surround, Inside Corners, Soffit/Eave Terminations, and Transitions.

LENGTHS

- 12-1/2'

COLOR

- 15 Standard Everlast Colors

INSTRUCTIONS - MITER INSTALL FOR OPENINGS

1. Measure the height and width of the opening.
2. 45° miter cut with a fine tooth or PVC blade.
3. Fasten the casing trims to the wall around the opening approximately every 8" to 12" along the nail hem using galvanized, stainless, or corrosion resistant nails or screws (Fig 1).
4. To join the miter ends, mechanically fasten the joints together through the pocket at the miter ensuring the fastener is long enough to penetrate the adjacent joint, but not go through. In addition to mechanically fastening the mitered joint, you can also use a PVC adhesive in conjunction with the fasteners, strengthening the miter joint. Make sure you clean the surface you are adhering together with alcohol, and do not allow the adhesive to get on the reveal surface (Fig 2).



FASTENERS EVERY
8" TO 12"

Fig. 1

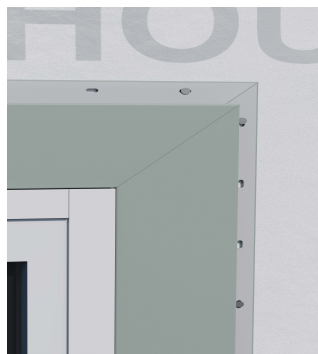


Fig. 2

INSTRUCTIONS - STRAIGHT CUT (CRAFTSMAN) INSTALL FOR OPENINGS

1. Measure the height of the opening and cut the casing using a fine tooth or PVC blade.
2. Fasten the casing trims to the wall around the opening approximately every 8" to 12" along the nail hem using galvanized, stainless, or corrosion resistant nails or screws.
3. For the top and bottom pieces of the casing, measure to the desired width, making sure this measurement is, at a minimum, to the outside edge of the vertical pieces.
4. Prior to installing the horizontal pieces, rabbit out siding receiving pocket to the same depth as the pocket on the vertical pieces to allow for a consistent pocket depth when the siding is installed.
5. Fasten the horizontal pieces to the wall around the opening approximately every 8" to 12" along the nail hem using galvanized, stainless, or corrosion resistant nails or screws (Fig 3).
6. Use a color matched paint from Sherwin Williams to touch up the exposed edges.

Note: For the Craftsman style detail to be achieved, the receiving pockets on the trim will need rabbited to the coordinating depth on adjacent trims to allow for a consistent pocket depth when the siding is installed.



Fig. 3

INSTRUCTIONS - INSIDE CORNERS

1. Measure the height of the inside corner wall.
2. Cut two casings using a power saw with a fine tooth or PVC blade.
3. In situations to achieve a low profile inside corner, measure and rip cut to the desired width on a table saw.
4. Fasten one casing to one inside wall approximately every 8" to 12" along the nail hem making sure to keep plumb.
5. Fasten the second casing to the second inside wall approximately every 8" to 12" along the nail hem making sure to keep plumb.

INSTRUCTIONS - TERMINATIONS & TRANSITIONS

1. Before the last piece of Everlast siding is installed, measure the length of the termination or transition area.
2. Cut the casings using a power saw with a fine tooth or vinyl blade.
 - 2a. For best results on long runs, use a scarf joint with two fasteners on each side in place of butt joints.
 - 2b. Fasten the casings to the wall approximately every 8" to 12" along the nail hem making sure the casing is securely fastened using galvanized, stainless, or corrosion resistant nails or screws.
3. When face nailing, use 8d nails or 3" galvanized finishing nails. Space nails 8" to 12" apart. Counter sink nails 1/16" below the surface of the brickmould. Nails should penetrate the structural frame at least 1". To conceal nail holes, use a sealant or epoxy. Cortex screws and plugs can also be used.

3-1/2" Casing (Color Match)

Trim Installation Instructions (pg 3/4)

INSTALLING AROUND DOORS, WINDOWS, BLOCKS & VENTS

- To aid in ease of installation, trim the nailing fin off of the bottom trim piece (Fig 4).
- Measure the body of the trim and add 1/8"-1/4" to ensure clearance between the top of the siding panel and the base of the trim pocket (Fig 5).
- Install the bottom trim last after installation of Everlast siding panel (Fig 6).
- Fastening options:
 - Finish nail, decking screw or Cortex screw with matching color plug into the center of the main body of the trim, no less than 1/2" from any edge or end (Fig 5).
 - 316 stainless fasteners are recommended.
 - Target fasteners every 16" or less in the center of the trim body.
 - 8d, 12 gauge annular threaded or spiral type fastener is recommended.
 - Make sure to fasten into framing member (not sub-wall).
 - Fasteners must penetrate into the framing of the sub-wall minimum 1-1/8".

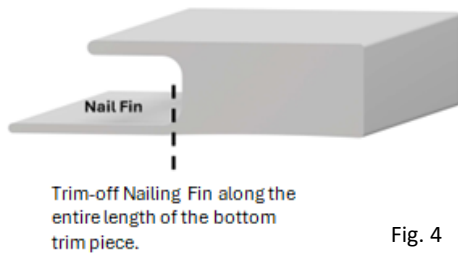


Fig. 4



Fig. 4

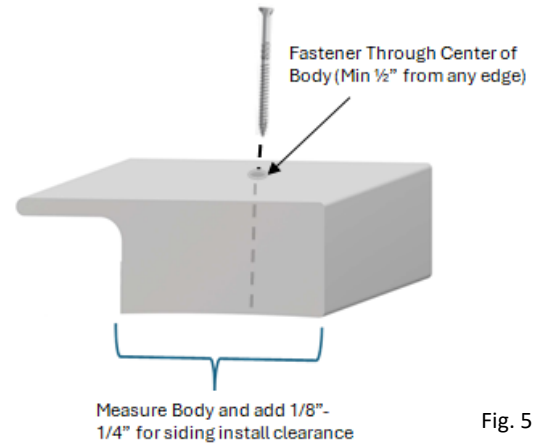


Fig. 5



Fig. 6



OPTIONAL FACE NAILING

- Finish nail, decking screw or Cortex screw with matching color plug into the center of the main body of the trim, no less than 1/2" from any edge or end (Fig 5).
- 316 stainless fasteners are recommended.
- Target fasteners every 16" or less in the center of the trim body
- 8d, 12 gauge annular threaded or spiral type fastener is recommended.
- Make sure to fasten into framing member (not sub-wall).
- Fasteners must penetrate into the framing of the sub-wall minimum 1-1/8".



INSTALLING AROUND BOWS & BAYS

Determine the angle of the bay/bow window or architecture wall where a typical 90° Outside Corner Post will not work (Fig 7).

- Determine the length(s) needed to construct the corner.
- Determine the desired reveal width.
- Set your table saw angle determined for the trim to achieve the angle of the window or wall with irregular corners.
 - Example: If the window or wall corner is 110°, then your saw angle cut for the trim is 36° (Fig 8) for each length of trim. Two (2) lengths needed per corner (Fig 9).
- Rip/cut along the length of the both casings and determined angle (Fig 9).

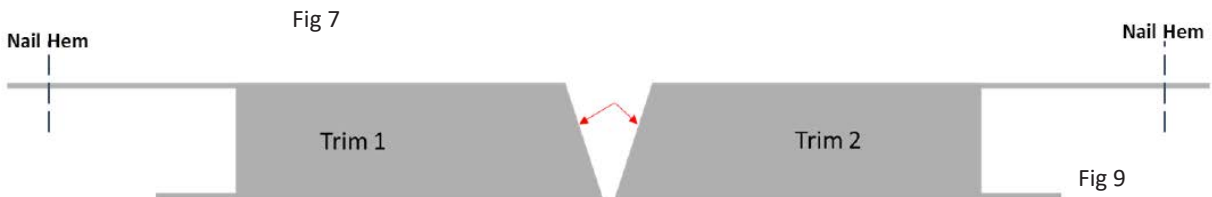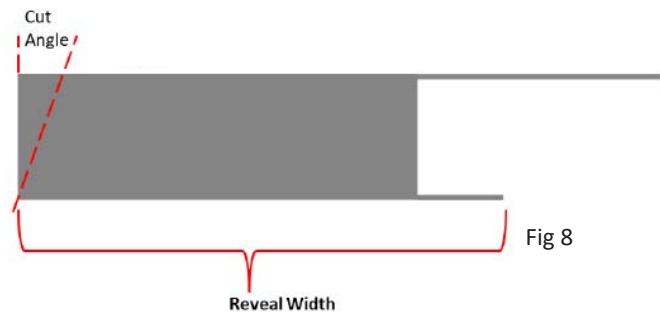

- Using PVC glue to bond the joint together, ensure no adhesive gets on the face of the casing (Fig 10).
 - Refer to the adhesive manufacturer's guidelines for the cure time and usage.
 - Painters tape will be useful in this situation to mask off the area and hold together the adhered pieces. Pocket screws may be necessary along with the PVC glue.
- Secure both trims together at the glued surfaces (Fig 11). Make sure you line up your ends and joint.
- Once the PVC glue has cured, attach the casing to the wall approximately every 8" to 12" along the nail hem using galvanized, stainless, or corrosion resistant nails or screws.
- Install Everlast siding per the instruction guide.

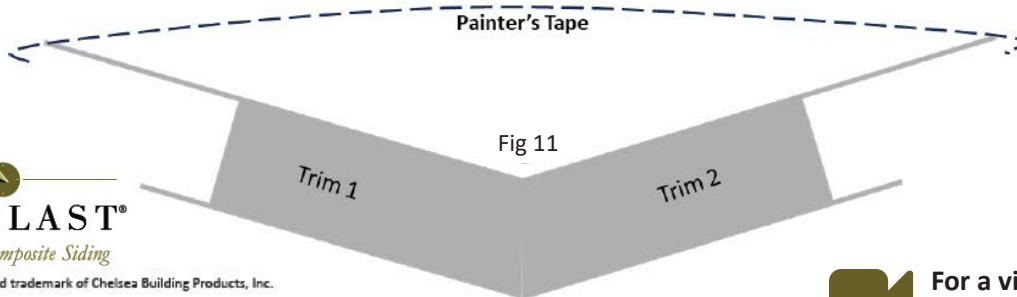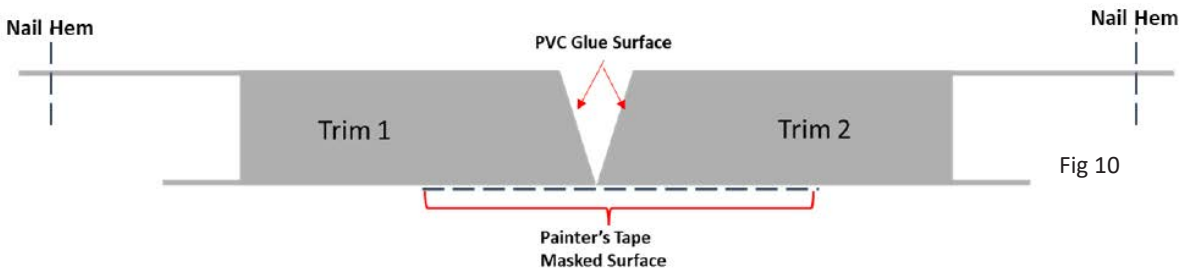

Everlast® Call Center Support Line
8am – 5pm EST Mon-Fri
Toll Free (844) 494-7920
www.EverlastSiding.com